



Burris

FIND WHAT MATTERS

FASTFIRE™ 3




User Guide

FastFire™ 3

Red Dot Reflex Sight

Congratulations on purchasing the Burris® FastFire 3! This versatile red dot reflex sight will be the perfect fast-action sighting solution for your handgun, rifle or shotgun. You will enjoy the following features in your FastFire 3 sight:

- **Compact & Lightweight.** Weighing less than 1 ounce, the FastFire 3 won't affect firearm balance or handling. The frame is built from stainless steel, bronze, and anodized aluminum for ultimate reliability and recoil resistance.
- **1x Magnification.** The parallax-free, 1x FastFire 3 allows for both-eyes-open shooting, for enhanced awareness and better accuracy.
- **Bright Red Aiming Dot.** Allows for fast target acquisition and easy aiming.
- **4 Brightness Settings.** The Automatic Brightness Setting automatically adjusts the brightness of the red dot to match the environmental conditions, while 3 manual brightness settings let you control the intensity of the red dot.
- **Windage & Elevation Adjustments.** Fine-tune your point-of-aim with no special tools required.

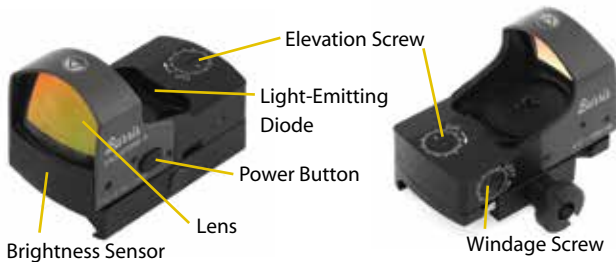

Operating Instructions

For optimum performance and to prevent damage to this precision instrument, carefully follow all instructions.

Package Contents:

- 2 #6x48 Screws with Torx® socket head for installing the sight on the mounting plate
- 1 Torx® Wrench
- 1 Protective Cover
- 1 Lithium Battery 3V (CR1632)
- User Guide
- Weaver/Picatinny-style Mount (on select models)

Specifications:

- Magnification: 1.07x
- Sight Window: 21mm x 15mm; .82" x .59"
- Elevation adjustment range: 115 MOA
- Windage adjustment range: 86 MOA
- Set value for one scale division: 1 MOA
- Subtension of the aiming dot: 3 MOA or 8 MOA (depending on model)
- Recoil resistance: At least 1000 G's
- Operating Temperature Range: -10°F to +130°F (-25°C to +55°C)
- Storage Temperature Range: -40°F to +160°F (-40°C to +70°C)
- Power Supply: 3V with one CR1632 Lithium battery
- Dimensions: (LxWxH) 1.9" x 1.0" x 1.0" (48.2mm x 25.4mm x 25.4mm)
- Weight (in operating condition without mounting materials):
0.9 oz. (25 grams)

Torx® is a registered trademark of Camcar/Textron

Cautions and Warnings

Make sure the firearm is unloaded before mounting the optic. Do not look through the sight directly into the sun, light arcs, or other very high-intensity light sources. Keep away from children.

Remove dirt by blowing it off or use a very soft lens brush. Use lens cleaning tissues on the optical surfaces.

Battery Installation

The FastFire 3 operates with one commercially available 3V Lithium battery (CR1632). Do not attempt to substitute two CR2016 batteries.

To insert or replace the battery, unscrew the battery cap on the top of the sight using a slot head screwdriver. Make sure that the positive pole of the battery is facing up. Replace the battery cap, but do not over tighten. Keeping the battery contact surfaces clean will ensure reliable operation.



Installation


Installation on most rifles, carbines, and some handguns requires the included Picatinny/ Weaver Mounting Plate. Most other handguns, shotguns and rifles require a different mounting plate. See chart and special instructions below.

410335	Mount - Picatinny / Weaver (included)
410330	Mount - Picatinny Protector
410348	AR-F3 Mount for flat top AR receivers
410321	Mount - 1911 Standard
410322	Mount - 1911 Adjustable / Novak
410323	Mount - Kimber Standard & Bomar
410324	Mount - Beretta 92/96 /90-TWO/ Taurus PT99
410325	Mount - Beretta PX4 Storm
410326	Mount - Glock - all
410327	Mount - Sig Sauer P226
410328	Mount - Springfield XD
410329	Mount - Ruger Mark I, II, III
410331	Mount - Sako (requires Picatinny Mount)
410332	Mount - Ruger M77 and No. 1 Rifles, Super Redhawk and Super Blackhawk Hunter
410334	Mount - Winchester Model 94, pre-drilled & tapped
410333	Mount - Marlin Lever Rifle, Models 336, 444, 1895, pre-drilled & tapped
410336	Mount - Smith & Wesson M&P
410635	Xtreme Tactical Base - Sako Rifles (also requires Picatinny mount)



Picatinny / Weaver Mount

To install the FastFire 3 on a Picatinny or Weaver-style base, loosen the clamp nut on right side of the mount. Place the mount on the rail with the cross screw in the desired slot. Check to be sure all the clamping edges are engaged. Keep a little pressure on the sight toward the muzzle as you tighten the clamp nut to approximately 20 in-lbs.

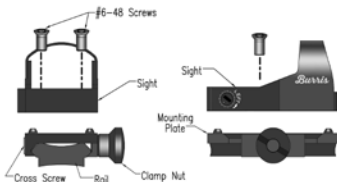

AR-F3 Mount

Place the AR-F3 mount on the rail with the cross bolt engaging the desired slot. A more rearward position will maximize field of view. Using the provided wrench, tighten the nut on the mount to 20 in-lbs. Using the provided Torx® wrench, install the FastFire on top of the mount. Tighten screws to 12 in-lbs.

Operating Procedure

Elevation and Windage Adjustment

There are separate adjustment screws for elevation and windage. The elevation adjustment screw is located on the top of the sight, and the windage screw is located on the right side. The windage adjustment mechanism has limit stops at both ends. Screwing either adjustment into a stop will lock motion of the other adjustment.



Zeroing the Point-of-Impact

Adjust the point-of-impact by using a small slot screwdriver or coin. The direction of the shift of the point-of-impact is indicated on the elevation and windage adjustment screws. One tick mark on either adjustment screw corresponds to 1 minute of angle (MOA), or approximately 1 inch at 100 yards. For other distances, this value is proportional, for example: .5 inch at 50 yards or 0.1 inch at 10 yards.

Power Modes

The power button is located on the left side of the sight. For greater versatility to accommodate any light condition, there are four settings that can be used to adjust the brightness of the red dot each time the button is pushed. These include:

#1 – Automatic adjustment. A light sensor automatically senses the surrounding light conditions and adjusts the brightness so that it is not overpowering in low light, yet visible in bright daylight.

#2 – Highest brightness setting

#3 – Medium brightness setting

#4 – Lowest brightness setting

To turn the power off, simply press the power button once more to completely shut off the electrical circuit and save your battery.

If the battery life falls below the limit of 4 hours, the light dot will begin to blink twice every 5 seconds.

Integrated Control Electronics

The integrated control circuit adjusts the brightness of the aiming dot according to surrounding light levels. The brightness sensor on the front of the sight senses the light level in the direction of the target and modifies the intensity of the dot accordingly so that it is not overpowering in low light while remaining highly visible in bright daylight. Be careful not to obstruct the sensor. Clean if necessary. Covering the sensor with your finger will affect the electronics only slightly. If you wish to check its function, cover the sensor with the protective cover.

Ambient Conditions

The FastFire 3 is water-resistant and will withstand rain or snow. It is also usable even after being accidentally submerged. However, after exposure to salty or dirty water, it is advisable to rinse with distilled water and dry the sight, as with any quality optical equipment.

Warranty

The Fast Fire 3 is covered by the
Burris Forever Warranty.™



Thank you for choosing Burris. You can be confident that the optic you purchased is built to the most exacting standards. You can count on Burris to perform every time you use it.

We're so confident in the craftsmanship of our products that we back them with a no questions asked Forever Warranty.

We will repair or replace your Burris optic if it is damaged or defective. The warranty is automatically transferred to future owners.

- No repair or replacement charge
- No warranty card needed
- No receipt required
- No questions asked



Burris Company

331 East 8th St.

Greeley, CO 80631

(970) 356-1670

BurrisOptics.com

Facebook.com/BurrisOptics

INSTR-9021